




Fantasia Jumbo Flyer
Kit Instructions


Jumbo Kit
Parts

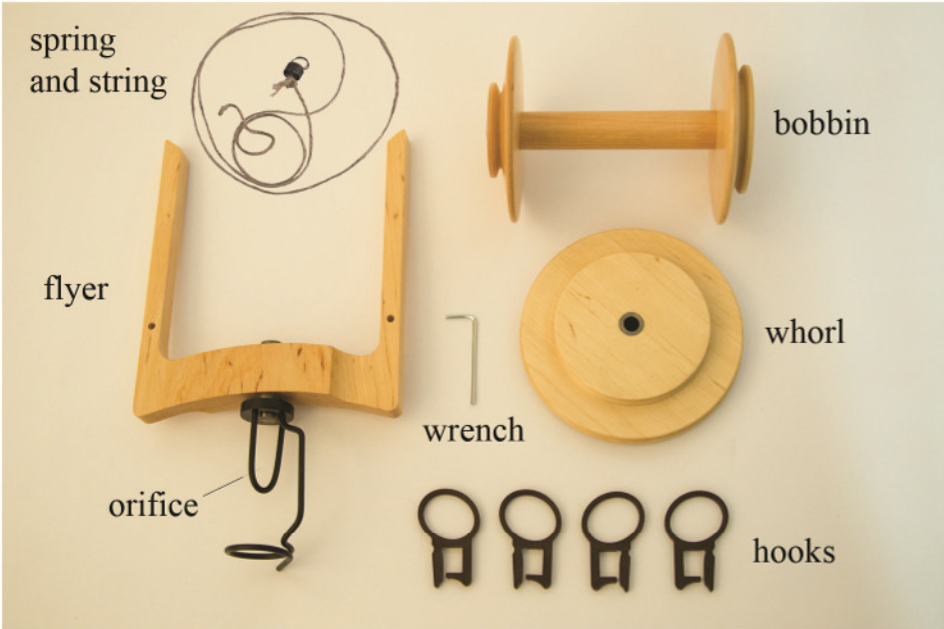

To prepare whorl before placing on spindle, loosen small screw on metal insert until there is no protrusion inside the insert. Use caution to not fully remove.




interior insert

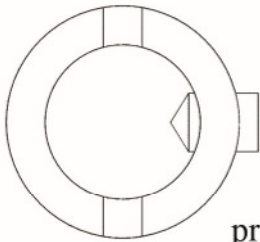



screw protrusion

INCORRECT

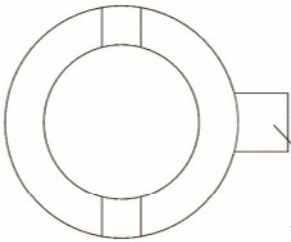


screw without protrusion

CORRECT

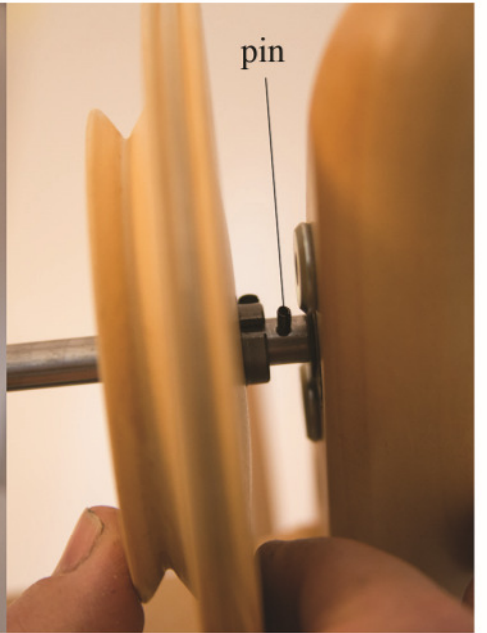
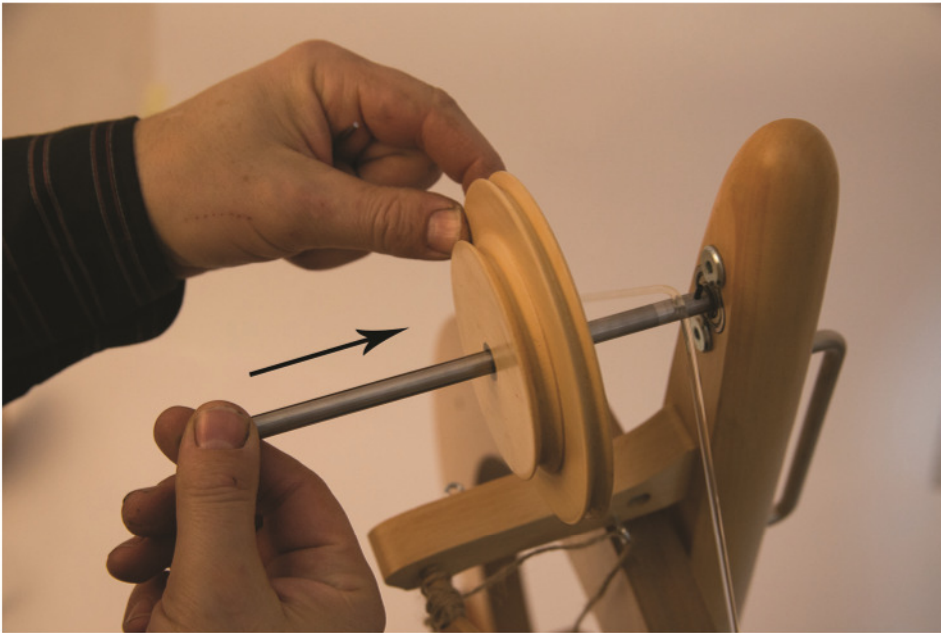


Next, align pin on spindle with slots on metal insert of whorl. Slide whorl until the pin is flush with backside of whorl.

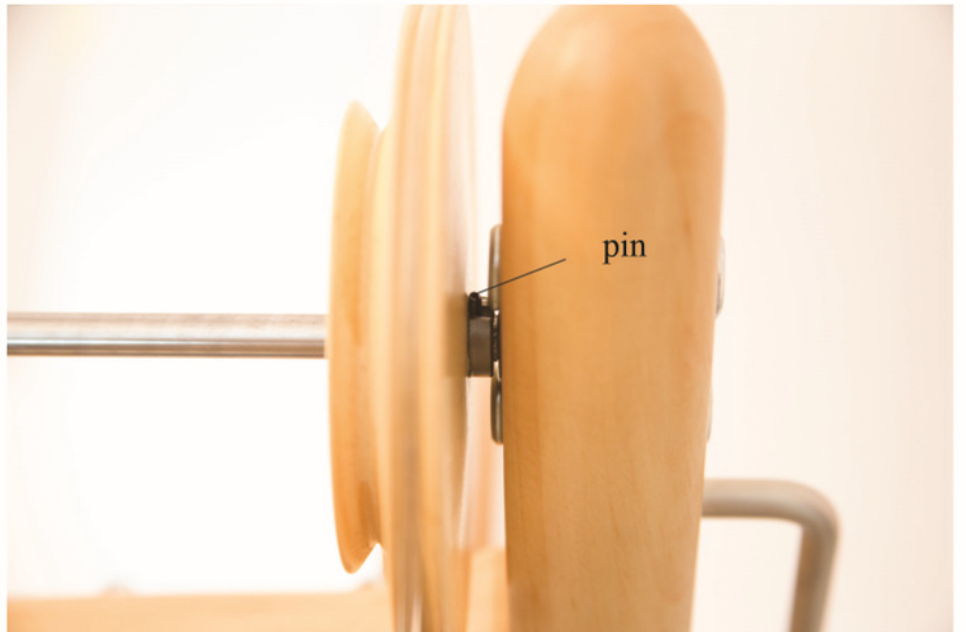

placing whorl



fully placed

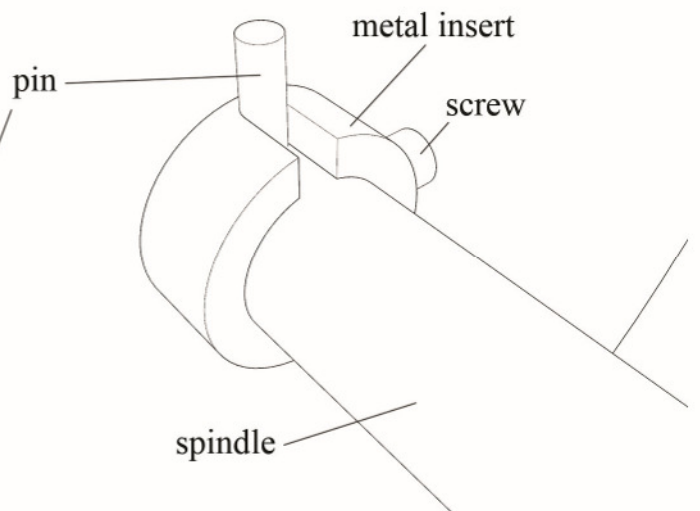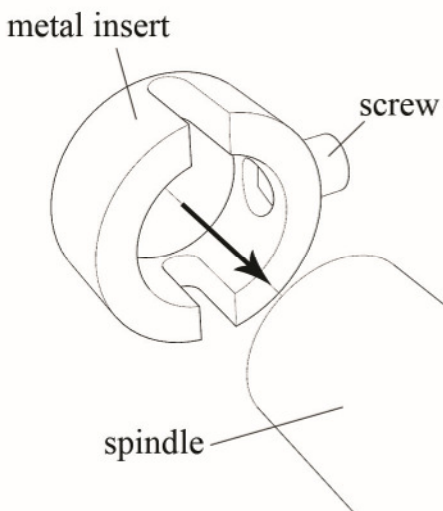




Use allen wrench to tighten screw on metal insert.

Although, orifice position can be manipulated to user preference, as the manufacturer, we strongly suggest that the orifice be in this position in regard to hooks.

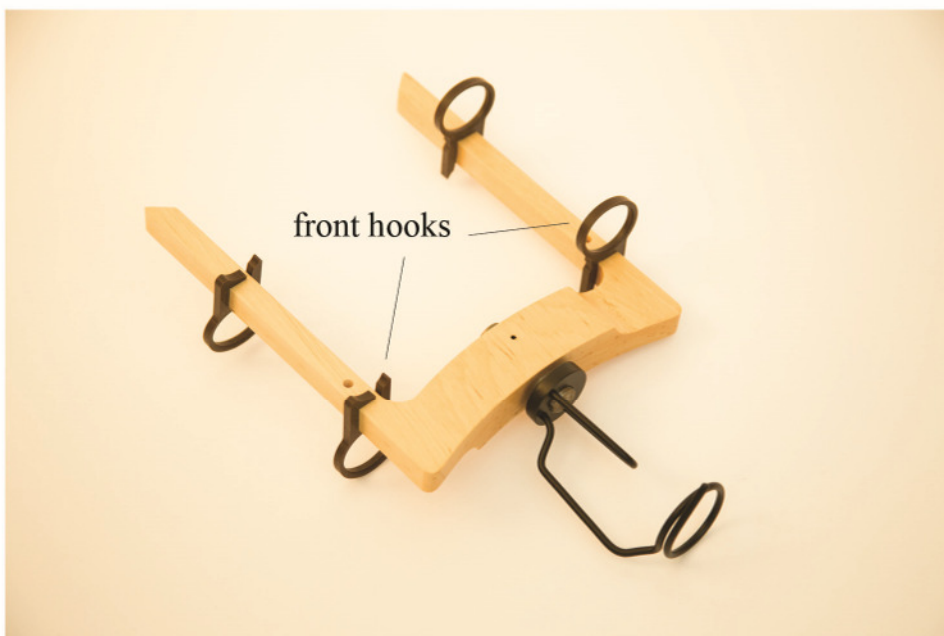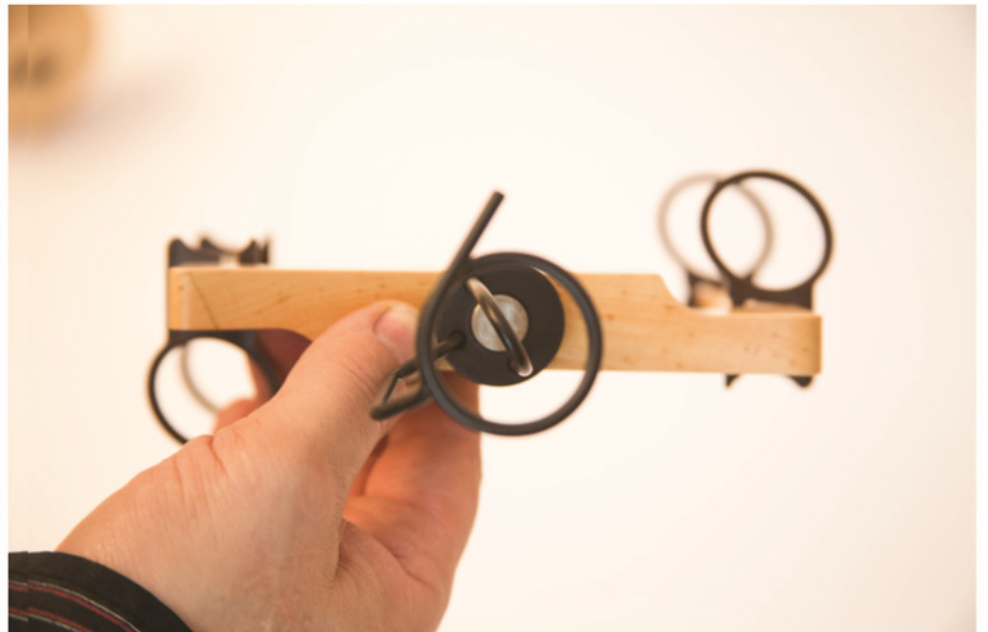

Slide Front hooks completely to front of flyer and leave in this position.

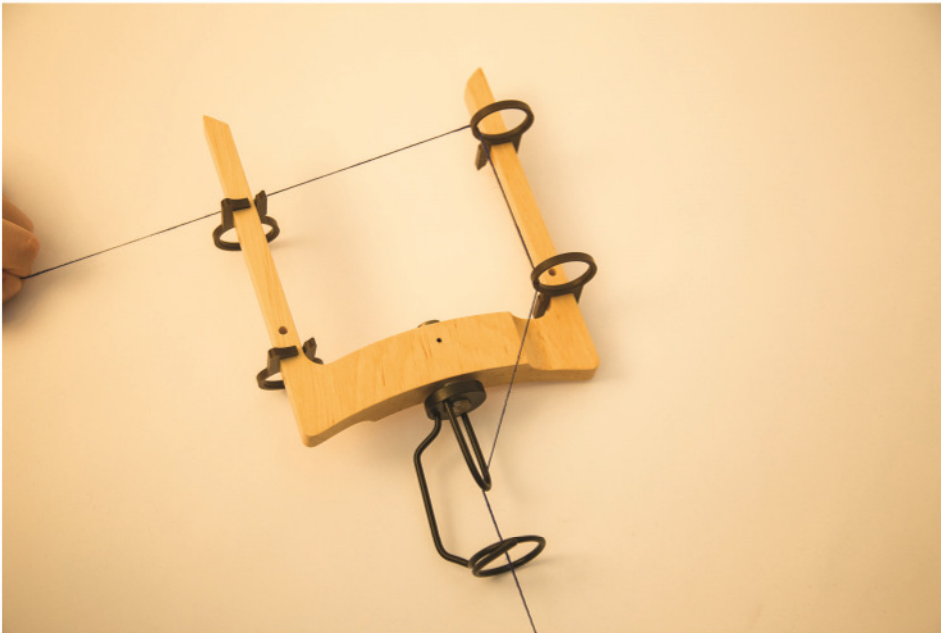


Here is an example of the direction the fiber should be running from orifice, through 2 hooks onto bobbin. As bobbin fills, slide the back hook forward and backward to dispense yarn evenly onto bobbin.

Now, put bobbin onto spindle, place drive band on whorl and tension band over bobbin.



Lastly, attach flyer to spindle by placing metal insert of flyer to the spindle and twisting slightly until you hear and feel the magnets connect.

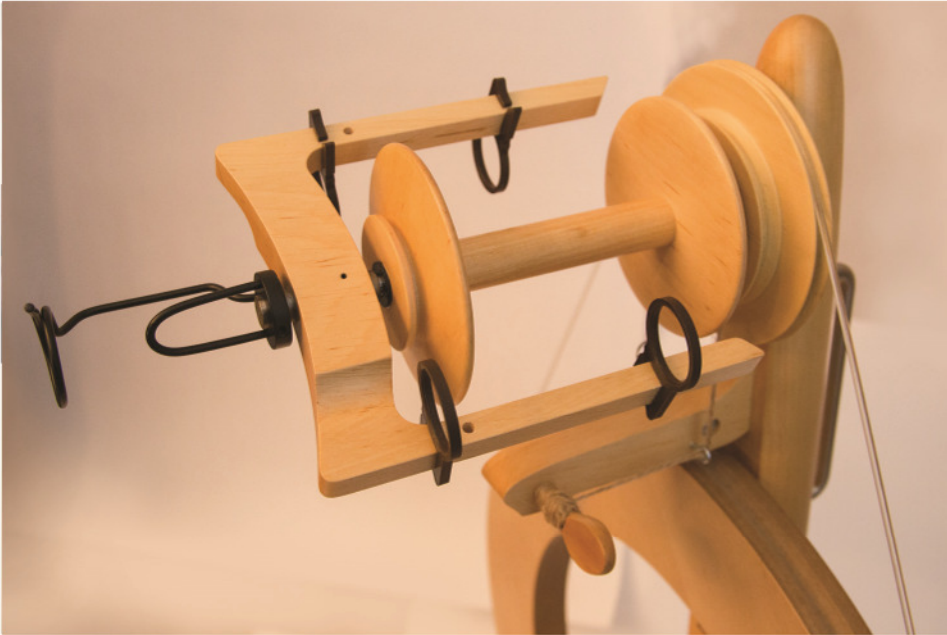

Correct view
of final installation.
